


Your phone

Your Cellhire phone has been quality checked and tested and both batteries are fully charged.

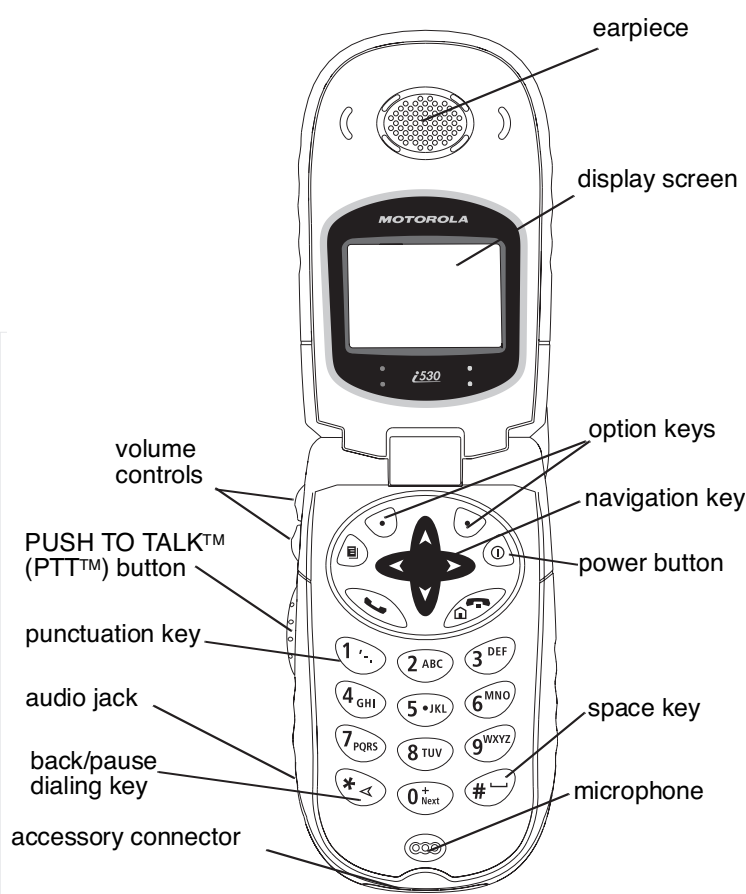

To power phone on / off

Open flip then press until the phone powers on.


Repeat to switch off.

Keypad lock

Press and then within 1.5 seconds.

Repeat to unlock.

Charging the battery

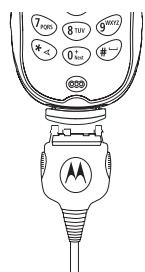

Connect the lead from the charger to the socket on the bottom of your phone then connect the charger to a wall socket.

You may need to use a plug adaptor for the wall socket. This is included in your rental pack.

You can use the phone while the charger is connected.

Answering / ending calls

To answer a call, open the flip and press .

To end a call, press .

Making calls

To make an emergency call

Dial 911 and press .

To redial numbers

Press then use to scroll to RECENT CALLS and press under SELECT. Scroll to the required number and press to send the call.

To make a domestic call

Dial CITY/AREA CODE then PHONE NUMBER and press to send the call.

E.g. Domestic call within the US: 214 355 5200

To make an international call

Press and hold (+ sign will appear).

Dial COUNTRY CODE then CITY/AREA CODE then PHONE NUMBER and press to send the call.

(COUNTRY CODES are listed overleaf. The CITY/AREA code of most countries outside of North America begins with 0. This 0 should be omitted when dialing).

E.g. Call to the UK, dial: +44 207 123 1234

Make a Direct Connect (Walkie-Talkie) or Group Connect call

Your Cellhire phone must be pre-programmed to make a Direct Connect or Group Connect call amongst your specified user list.

Direct Connect calls

1. Scroll through your phone book to locate the name/number.
2. Press and hold the Push To Talk™ walkie-talkie button on the side of your handset while you talk, or press under ALERT and then press the Push To Talk™ button.

Answer a Direct Connect call

1. To answer a call, simply press and hold the Push To Talk™ walkie-talkie button and talk. Release the button to listen.

Making a Group Connect call

1. Press # and enter the Talkgroup Number, or select a Talkgroup from your phone book.

2. Press the Push-To-Talk (PTT) button.
3. After the Chirp, begin speaking.
4. Release the (PTT) button to receive a response.

Continue as if on a Direct Connect call.

Phone book

Saving contacts

In standby mode, press under PHBK.

Scroll to NEW ENTRY and press under SELECT.

With the NAME field highlighted, press under CHANGE.

Enter the contact's name using the keypad then press under OK.

To enter the contact's number, scroll to the # field and press under CHANGE.

Enter the number then press under OK.

A speed dial number will automatically be assigned and displayed in the SPEED # field. To change this number, ensure this field is highlighted then press under CHANGE.

To delete the speed dial number already assigned, press under DELETE then press under OK to save.

When you have finished the phonebook entry, press under DONE.

Searching for / calling a contact

In standby mode, press under PHBK.



Scroll to the desired contact and press to send the call.

Speed dials




Speed dialing a phone number

Press the speed dialing key you want to call followed by .

Retrieving your messages when in the US

An envelope symbol  or message notification message will appear when you have received a new VoiceMail message. Press the top right  button and when prompted, enter PIN code 1020

Retrieving your messages when outside the US

Press and hold  (+ sign will appear). Press 1 plus the first six digits of your mobile number followed by 6245 and press . When prompted, enter your 10 digit mobile number. Press  to interrupt the personal greeting and enter PIN code: 1020

Retrieval of messages left in your VoiceMail will be charged at the standard call rate. Please refer to your Rental Agreement.

International country codes

Australia	61
Austria	43
Belgium	32
Brazil	55
Canada	1
China	86
Finland	358
France	33
Germany	49
Greece	30
Hong Kong	852
Italy	39
Japan	81
Netherlands	31
Norway	47
Portugal	351
Russia	7
South Africa	27
Spain	34
Sweden	46
Switzerland	41
Taiwan	886
UK	44
US	1

Cellhire has pre-arranged procedures to collect your equipment, simply follow the instructions below.

- Step 1:** Place your equipment in the enclosed return bag. Be sure to use the bubble-wrap that was sent with the equipment.
- Step 2:** Take note of your FedEx tracking number displayed at the beginning of this instruction booklet with your Cellhire number.
- Step 3:** Call FedEx at 1 800 GO FEDEX or 1 800 463 3339 and request pickup. If you are staying in a hotel, please ask the front desk or concierge to arrange FedEx pickup.

Please note: The customer is responsible for the equipment until FedEx scans the package. If the FedEx Representative asks you for an account number, simply tell them that you are returning the package via a Billable Stamp.

Please return your equipment from the US. Any international shipments billed to Cellhire's account will be subject to a collection fee.

Please note that Saturday pickups are subject to a \$10.00 fee.

Your FedEx tracking number is displayed at the beginning of this instruction booklet with your Cellhire number.

Important: The equipment is the customer's responsibility until it is scanned and collected by the courier. Any lost package without proof of courier collection is the sole responsibility of the customer.

Lost / stolen equipment

If your equipment is lost or stolen you must call Cellhire immediately on: + 1 214 355 5200. All calls made are the responsibility of the customer until the theft / loss is reported to Cellhire.

24 Hour Global Support

International: +1 214 355 5200 (US)
 US toll free*: 1 888 476 7368
 E-mail: support@cellhire.com

*From a US landline only

For on-line support, please visit www.cellhire.com and click support.

Thank you for renting from Cellhire.